

## Part 2, Attachment 2. Chassis Pre-assembly


Wall of Sound.ca Tubelab DIY EL84 Amp

Tools Required:

- Philips screw driver
- Sharpie marker
- Painters' tape



Assemble the **two** small blocks to the inside of the front panel but leave the screws slightly loose.

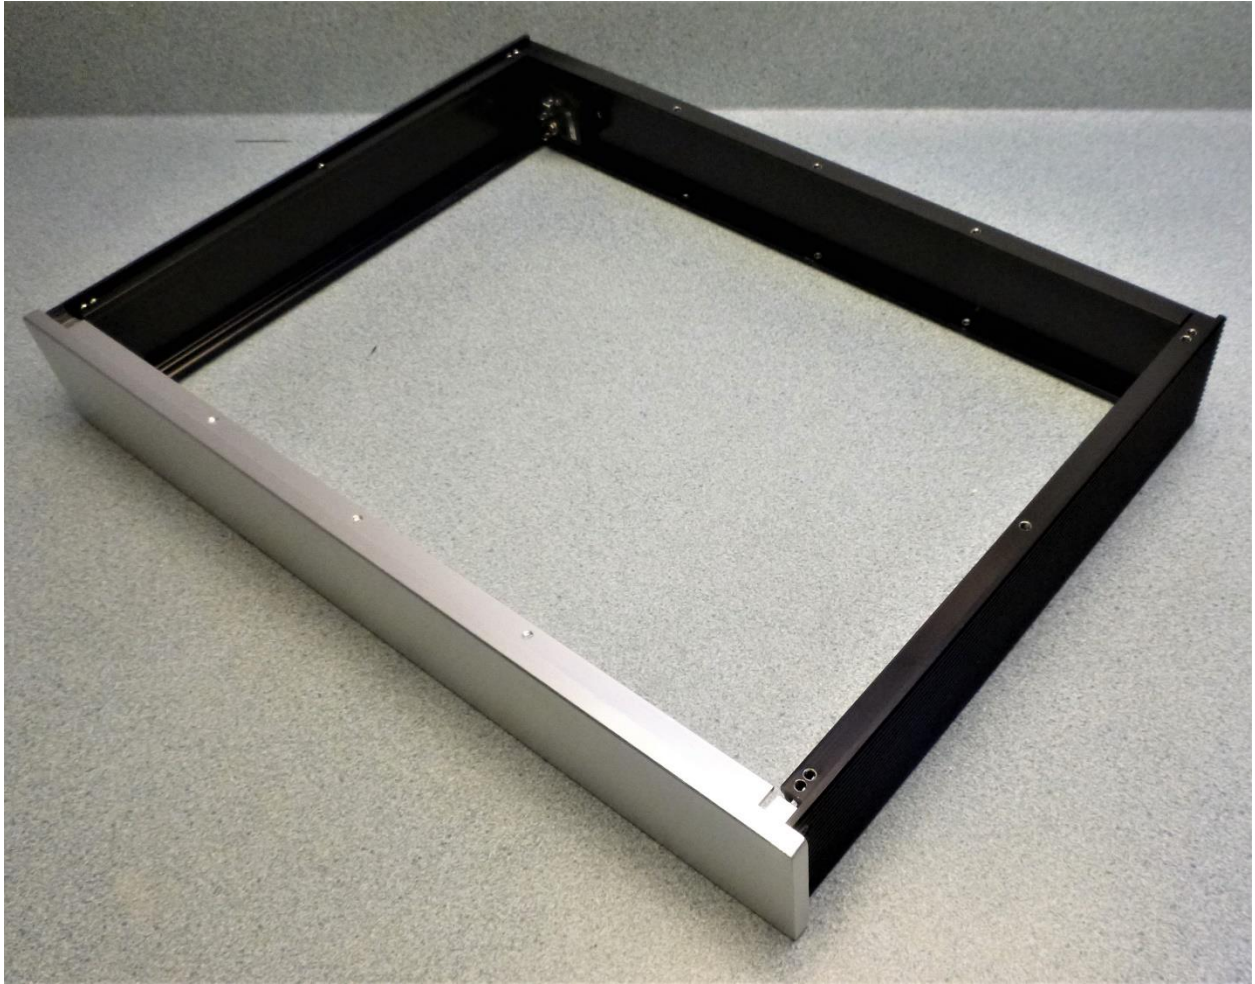

Assemble the sides and back to the front.

Assemble the top and bottom to the sides, front and back.

Assemble the AC inlet to the back.




Pick the "nicer" panel for the top, if one is better than the other. Label as shown.



Remove the top, the AC inlet should be on the left side as shown above. If not remove the rear panel and rotate 180 degrees.

Label the inside front of the bottom panel as shown above and remove from the sides, front and back.

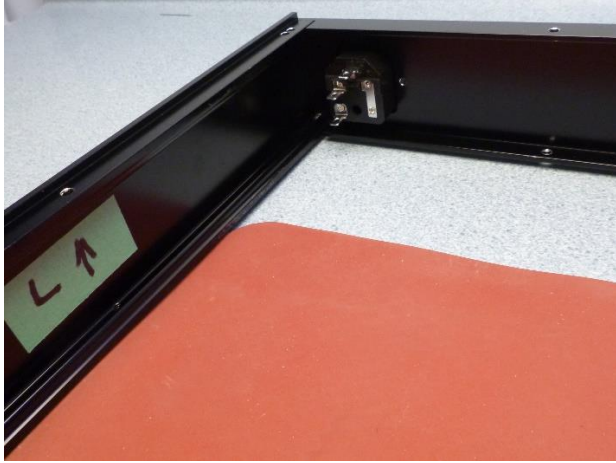

Label the sides, front and back.

Disassemble the sides front and back. Remove the side attaching blocks from the front.

Proceed to Part 2, Attachment 3.